

1	+12V solenoid valve	15	Manifold Absolute Pressure (Vacuum)	29	+12V Gas Injectors	43	Reducer differential pressure
2	GND solenoid valve, GND multivalve, GND level indication sensor	16	Reducer temperature	30	GND Battery	44	RPM
3	GND diagnostic interface, GND temperature sensor, GND mapsensor	17	Lambda 2	31	Gas injector 7	45	Lambda 1
4	Gas injector 8	18	CAN BUS line L	32	Gas injector 5	46	CAN BUS line H
5	Gas injector 6	19	LED 5 (yellow diode)	33	Gas injector 4	47	OBDII K-line
6	Gas injector 3	20	Petrol injector 4 (injector side)	34	Gas injector 2	48	Petrol injector 4 (Petrol ECU side)
7	Gas injector 1	21	Petrol injector 3 (injector side)	35	+12V level indication sensor, +12V ignition key	49	Petrol injector 3 (Petrol ECU side)
8	Fuel pump	22	Petrol injector 2 (injector side)	36	+12V switch	50	Petrol injector 2 (Petrol ECU side)
9	+12V interface	23	Petrol injector 1 (Petrol ECU side)	37	Diagnostic interface RX	51	Petrol injector 1 (injector side)
10	+12V mapsensor	24	Petrol injector 8 (injector side)	38	Switch – BUZZER	52	Petrol injector 8 (Petrol ECU side)
11	Diagnostic interface Tx	25	Petrol injector 7 (injector side)	39	LED 4 (red-reserve diode)	53	Petrol injector 7 (Petrol ECU side)
12	Switch – button	26	Petrol injector 6 (injector side)	40	LED 2	54	Petrol injector 6 (Petrol ECU side)
13	LED 3	27	Petrol injector 5 (injector side)	41	Level indication sensor	55	Petrol injector 5 (Petrol ECU side)
14	LED 1	28	+12V Battery	42	Gas temperature sensor		

